
SIZE:80\*160mm 105g雙銅紙/過光油/雙面印刷/風琴折

**SAMSUNG Lifestyle** 

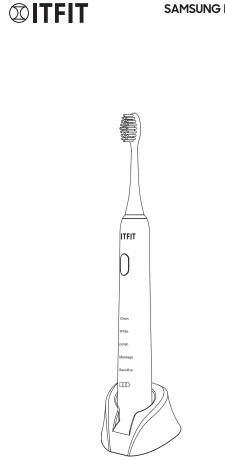

Rechargeable

**Electric Toothbrush** 

**User Manual** 

**SAMSUNG Lifestyle** 

**ITFIT** 

## Before Use

Thank you for using Rechargeable Electric Toothbrush. Before operating this product, please read the User's Manual completely and save them for future use.

## **Feature of Product**

- 5 Brushing Modes, store the mode lately used
- 48,000 VPM • Use up to 180min. when fully charged
- 6 Brush Heads
- USB Rechargeable • IPX7 Waterproof

### **Product Information**

Product Name: ITFIT Rechargeable Electric Toothbrush Model No. ITFITEX37

Material: ABS, Cylindrical Lithium-ion Battery, Electronic Parts Input(Charging Station):5V/1A

Power Consumption(Charging Station):1.8W Battery Capacity:800mAh(2.96Wh)/3.7V Product Dimensions(Brush Head and Handle) 233x28x28mm


Product Weight(Brush Head and Handle): Approx. 101g Travel Case Dimensions: 201x71x37mm

Travel Case Weight:83g Operating/Storage Temperature:0°C~45°C Electric ToothbrushWaterproof Rating:IPX7 Country of Manufacture:China Manufacturing Date: 2023.12

## Contains

Toothbrush Handle, Brush Heads x 6pcs(Random Colors), Charging Station, Travel Case, User Manual

## Product Appearance Introduction

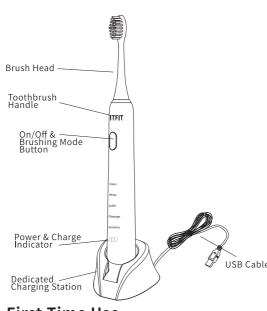

## First Time Use

- Store the brush head on the top of the handle after it is fully charged (maintain approximately
- 1mm gap between the brush head and the handle) Charge the product before initial use (requires 24 hours for a full charge from zero).
- Connect the charging station to a USB-A port for
- charging.
   Place the handle vertically on the charging station. Disconnect the power cord after the charge is

### How to Use

- I.Dampen the brush head and apply toothpaste.
- 2.To prevent toothpaste splatter, place the brush head inside the mouth before turning on the powe
- 3. Press the power button briefly to start. 4. After powering on, short press the power button to

### • Mode Descriptions

intensity and pattern.

Mode Names	Indicator Light	VPM(Vibrations Per Minute)	Vibration Frequency
Clean	Clean	Approx. 35000	295±20Hz
White	White	Approx. 41000	342±24Hz
Polish	Polish	Approx. 48000	400±28Hz
Massage	Massage	Approx. 41000	342±24Hz

- Sensitive Sensitive Approx. 35000 295±20Hz
- 5. Briefly press the power button for manual shutdow (automatic shutdown after 2 minutes).
- Within the initial 5 seconds before the mode starts, a short press of the power button shifts to the next mode. Beyond 5 seconds into the mode, a short press of the power button powers off the device. • Clean/Massage/Sensitive modes share the same VPM and frequency but vary slightly in vibration
- The toothbrush features a built-in timer with a prompt every 30 seconds, reminding you to clean each quadrant of your mouth for approximately a quarter of the recommended brushing time.

## **Electric Toothbrush Usage Tips**

- Start brushing from the edges of the teeth, gently guiding the electric toothbrush across the entire
- Avoid applying excessive pressure with the brush head to reduce the risk of tooth sensitivity.
  It's recommended to brush the lower teeth first,
- then the upper teeth. Brush the outer surfaces of the teeth before moving to the inner surfaces.
- Brush 2-3 teeth at a time during the brushing process.

  • For a better use of the product, you may consult

約35000次 295±20Hz

約41000次 342±24Hz

約48000次 400±28Hz

約41000次 342±24Hz

約35000次 295±20Hz

with a dentist.

## **Charging Indicator Light Guide**

Placing the toothbrush on the charging station initiates the charging process. When charging, the charge indicator light flashes

抛光 Polish

牙齦按摩 | Massage |

強度與方式略有不同

電動牙刷使用技巧

•刷牙時,每次刷2~3顆牙齒即可

充電指示燈說明

敏感 Sensitive

5.短按開關關機(使用2分鐘自動關機)。

模式5秒以上,短按開關則進入關機。

30秒清潔口腔約四分之一的區域。

•模式工作開始前5秒內,短按開關可進入下一模式。進入

•潔牙/牙齦按摩/敏感三種模式VPM與頻率相同,但震動

•牙刷內置計時器每隔30秒會有提示音。提醒您平均每

• 從牙齒的邊緣開始刷牙,輕輕的帶著電動牙刷刷完整個

• 不要把刷頭壓得太大力,可能增加牙齒敏感的風險。

• 為了更好的使用產品您可以諮詢牙科醫生。

• 可先刷下排牙齒,再刷上排。牙齒先刷外側,再刷內側。

once fully charged, the charge indicator light

safer product usage, it is recommended to disconnect the power source after fully charging the product.

Notes: In order to extend battery life and ensure

### Daily Maintenance

- Keep the brush head clean to prevent the growth of bacteria and microbes.
- After each use, rinse the brush head with water and pat it dry.
- It is recommended to detach the brush head from the handle and rinse it at least once a week. Regularly replace the brush head (recommended)
- every 3 months). If you notice deformities or wear on the bristles, replace them promptly. Rinse the brush head and handle with water. Use
- soft cloth to wipe the charging station and travel

### **Eco-friendly Tips**

This product contains a battery and is considered recyclable electronic waste. To protect the environment, please do not dispose of it with household garbage; instead, take it to the electronic waste recycling facility provided in your area.

#### Warnings

- Consult a dentist before use if undergoing recent oral treatment.
- Ensure the brush head is securely attached to the handle before each use; do not use without the brush head.
- Do not use the product if unfamiliar with its operation to prevent potential harm. · Keep out of reach of children; not intended for use
- as a toy. • Cease use immediately if the product, charger, or
- charging device is damaged.Avoid submerging the charger in water and refrain from prolonged exposure of the electric toothbrush to water to prevent malfunction, fire, electric shock, or explosion.

- If the charger accidentally falls into water, unplug it
- Do not unplug the device with wet hands.
- Avoid storing the product in high-temperature or humid areas.
- Do not clean the product in a dishwasher.

#### Cautions

- In the initial days of product use, slight gum bleeding may occur, which typically subsides within a week. If bleeding persists or any discomfort arises after a week, discontinue use and consult a dentist immediately.
- Do not dismantle or alter any parts of the product to prevent damage.
- This product is designed for personal oral care
- only; do not use it for other purposes.

  Not suitable for children, infants, or individuals unable to operate it unless under the supervision or guidance of a guardian.
- Do not place coins, clips, or other metal objects on the charging station.

#### **Declaration of Restricted Substances Content**

nit Restricted			nical symbo	15
Lead(Pb) Mercury(H	g) Cadmium(Cd)	Hexavalent chromium (Cr+6)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
B O O	0	0	0	0
onic ts O	0	0	0	0
ging O	0	0	0	0
sure O O	0	0	0	0

## FDAFC(From C)

SAMSUNG C&T TAIWAN CORPORATION Address:110 Rm. 2203 22F, No.333, Keelung Rd., Sec.1 Taipei, Taiwan

TEL:+886 2 2728 8500 E-mail:itfittw@samsung.com

設備名稱:ITFIT 聲波電動牙刷

FDAFC(Fight & Z

限用物質含有情況標示聲明書

限用物質及其化學符號

備考1. "超出0.1 wt %"及 "超出0.01 wt %" 係指限用物質之百分比含量超出百分比含量基準值。 備考2、"○" 係指該項限用物質之百分比含量未超出百分比含量基準值。 備考3、"○" 係指該項限用物質為排除項目。

鉛 汞 鎘 六價銘 多溴聯苯 多溴二苯醚

# 日常維護

- 刷頭需要保持乾淨,以避免細菌和微生物滋生。 • 刷頭使用後用清水沖洗刷頭,並且刷頭擦乾。
- 建議至少每週一次,將牙刷頭從握柄取下,沖洗牙刷頭。 • 定期更換刷頭(建議每3個月更換一次刷頭)。如果發現
- 刷毛變形或磨損,也應盡早更換。 • 刷頭及握柄可用清水沖洗;充電座及旅行盒請用軟布

## 環保提示

本產品包含電池與可回收電子廢棄物。為了保護環境、請勿 以家庭垃圾處理;請將其送到您所在地區提供的電子廢棄 物回收站。

- 如果近期正在接受口腔治療,使用前請先諮詢牙科醫生。 • 每次使用前請確保刷頭牢固地裝在握柄上。切勿在沒有 刷頭的情況下使用。
- 如不了解產品使用方式,請不要使用本產品,以免操作
- 不當導致傷害。 •請放置在兒童和嬰兒接觸不到的地方,不可當玩具使用。 • 如果產品或充電器及充電裝置損壞,請立刻停止使用。
- •不要將充電器浸入水中,也避免將電動牙刷長時間浸入7 中,以免失效或引起火災、觸電、爆炸等危害。
- 如果充電器不慎掉入水中,應先拔掉電源再將產品撈起。 • 不要用濕手去拔插電源。
- 不要將產品放置在高溫或潮濕的地方。 • 請不要在洗碗機中清潔本產品。

## 注意

- 本產品僅供清潔個人口腔,請不要用做其他用途。
- 本產品不適合兒童,嬰兒和不會操作者使用,除非他們得 到其監護人在本產品使用方面的監督或指導。

台灣國際三星物產股份有限公司 地址:台北市信義區基隆路一段333號22樓2203室 電話:+886 2 2728 8500 E-mail:itfittw@samsung.com

# 聲波電動牙刷 使用說明書

# 使用前說明

感謝您使用聲波電動牙刷,為了安全的使用本裝置, 請在使用前仔細閱讀相關使用方法及注意事項。

# 產品特色

- 5種潔牙模式, 最後使用模式記憶 • 運轉次數高達每分鐘48,000次
- 充飽可連續使用180小時
- 可重複充電使用
- 整機達 IPX7 防水


## 產品資訊

- 產品名稱:ITFIT 聲波電動牙刷 產品型號:ITFITEX37 產品材質:ABS、圓柱鋰離子電池、電子零組件 輸入(充電座):5V/1A
- 消耗功率(充電座):1.8W 電池容量:800mAh(2.96Wh)/3.7V 產品尺寸(刷頭及握柄):28x28x233mm 產品重量(刷頭及握柄):約101g
- 旅行盒尺寸:201x71x37mm 旅行盒重量:83g 使用/保存溫度:0°C~45°C 電動牙刷防水等級:IPX
- 生產國別:中國 生產時間:2023.12

## 包裝內容物


牙刷握柄、6個刷頭(刷毛顏色隨機)、充電座、旅行盒、

# 部件說明

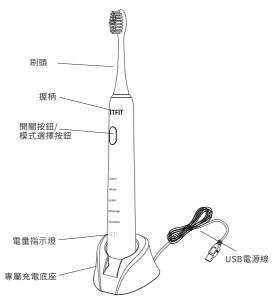

- 使用前請將產品充電(從無電到完全充飽需24小時)。
- · 充電座連接USB-A接口充電。 • 將握柄垂直放上充電座。
- 2.為避免牙膏飛濺,啟動電源前請將刷頭放入口腔內。
- 3.短按開關開機。 4.開機後短按開關切換模式。

# 模式名稱 指示燈 VPM(每分鐘震動次數) 震動頻率

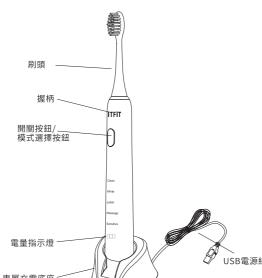

# 首次使用

- 將刷頭套在握柄頂端備用(刷頭與握柄需保持約1mm
- 充飽後將電源線斷開。

## 牙刷使用

\_\_\_\_ 1.沾濕的刷頭擠上牙膏。

### 將牙刷放在充電座上進入充電狀態。 充電時,電量指示燈慢速閃爍;

充飽後,電量指示燈常亮。 為了延長電池壽命及更安全的使用產品,建議您將產品 充飽電後把電源移除。

- 產品使用初期幾天,牙齦可能會有些微出血現象。一般一
- •請勿拆開本產品或改變本產品的零件,以免損壞本產品。
- 不要在充電座上放置硬幣, 夾子等金屬物。